

TUFLOC

INSTALLATION INSTRUCTIONS

Mini TufBox




Congratulations and thank you for your recent purchase of the TUFLOC TufBox. Esmet has designed and manufactured the highest quality products for over sixty-five years and we are confident that you will be a satisfied Tufloc product owner.

This manual includes simple step-by-step instructions to install, operate and maintain your Mini TufBox. Please contact the factory if you have any installation or operation questions.

Installation


Prior to installation, make sure the box will fit in its intended space. Because of the unlimited number of applications and mounting surfaces, hardware is not included.

1. Remove the plastic caps from the top and bottom of the TufBox. Unlock drawer and remove it from cabinet. (See Fig. 1)
2. Mounting holes are located on the top and bottom of the cabinet. Place the cabinet in its intended position. Use the mounting holes as templates to mark where the 1/8" pilot holes should be drilled. Using (2) 1/4" diameter fasteners and washers, mount the TufBox using the two holes located on the cabinet. You will drill the pilot holes and fasten the cabinet by putting the drill and screwdriver through the holes on the opposite side of the cabinet.
3. After the cabinet has been secured to its intended location, place the drawer back into the cabinet and replace the plastic caps on the cabinet.

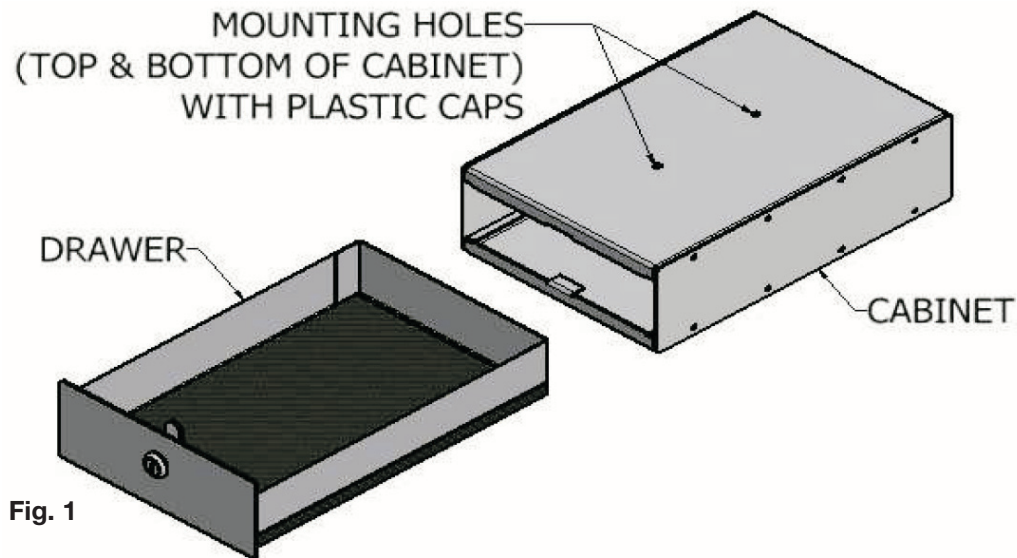

Replacing the Lock

Remove the drawer from the cabinet, use a screwdriver and remove the screw and star washer. Remove the cam from the backside of the lock and remove the locknut with a wrench. Pull the lock towards the face of the drawer and remove. Place new lock into opening and repeat. (See Fig. 2)

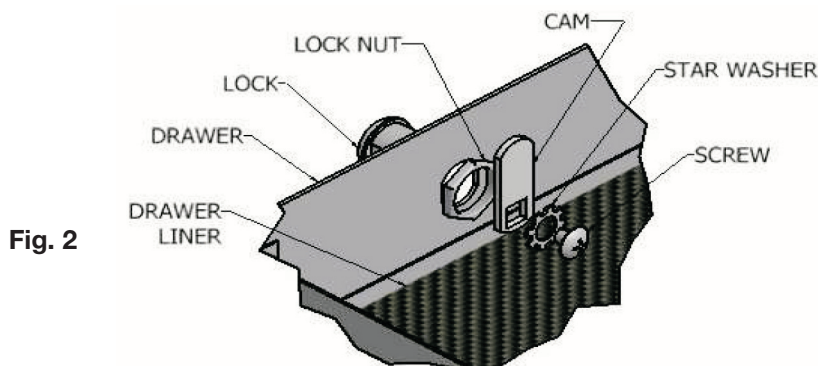

Warranty

TUFLOC warrants its products for one year from date of purchase against defects in materials and workmanship. This warranty is limited to replacement or repair of the product only. No other warranties are expressed or implied. Please contact the factory for warranty claims before returning any product.